EVO PRO REMOTE GUIDE

TV Power

TV Source

Play/Pause

Volume Up

Arrows

Volume Down

Back

Numbers

Menu

Google Play

Prime Video

Power

Stop

My TV

Channel Up

OK

Channel Down

Mute

Home

Google Assistant

Guide

YouTube

Configurable Buttons
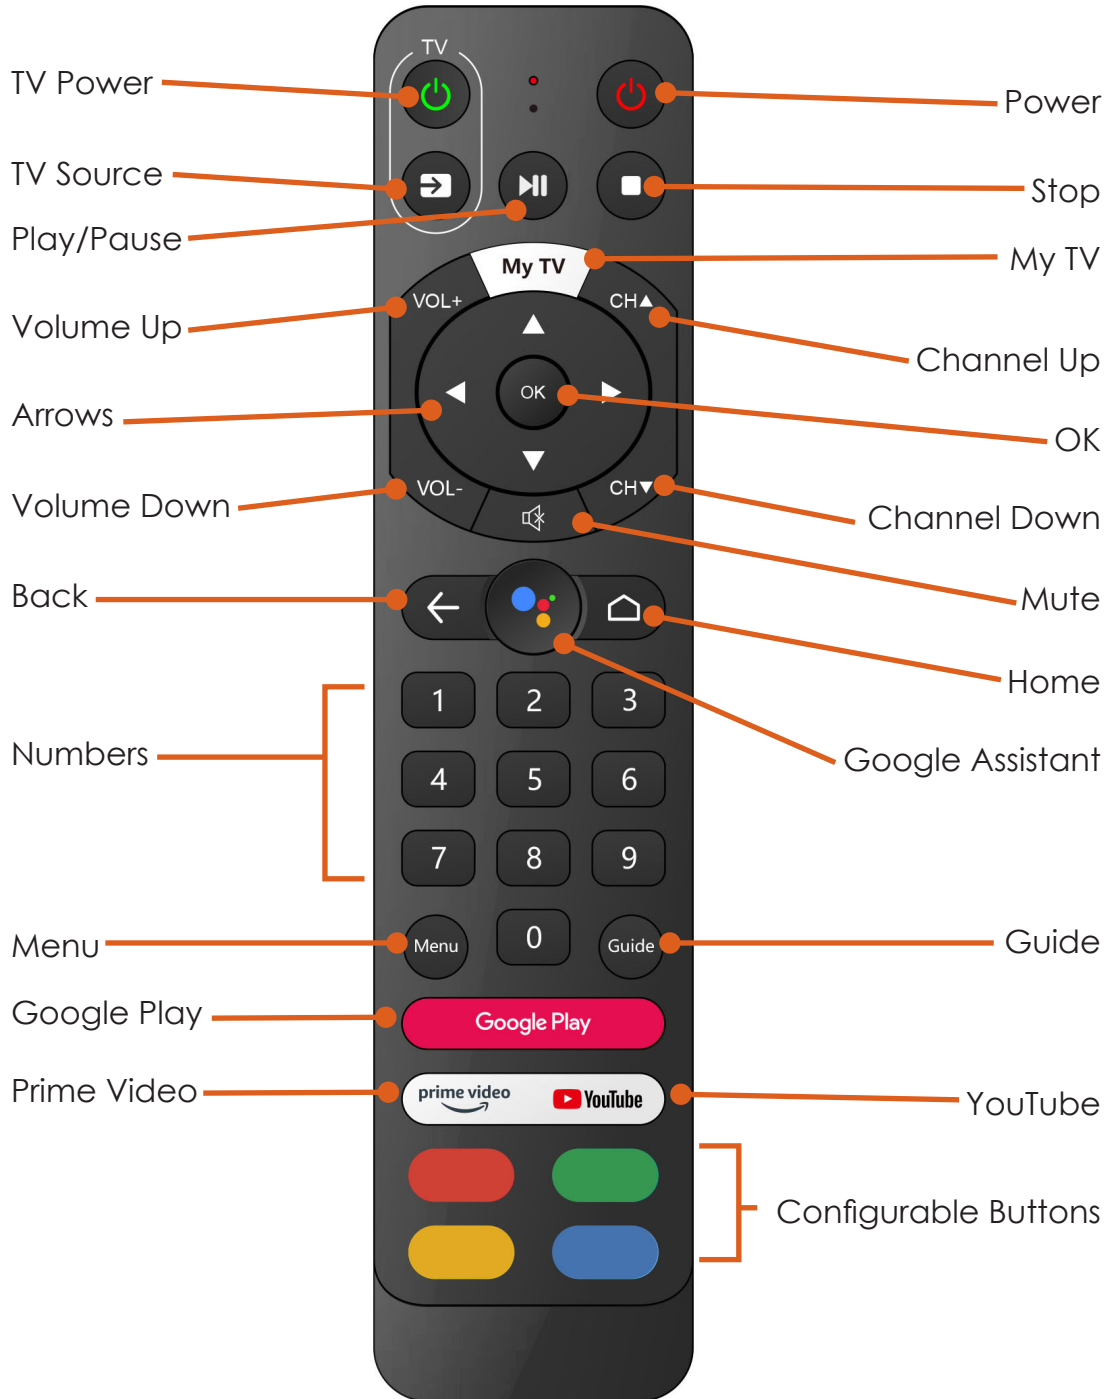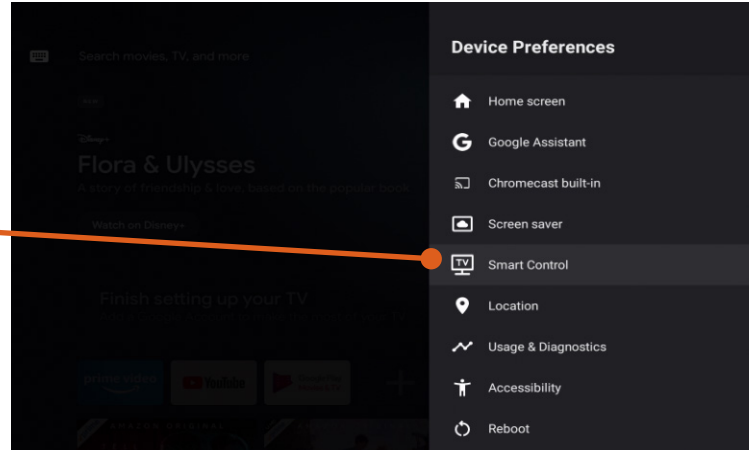
PROGRAM REMOTE TO TV

Under Settings -> Device Preferences -> Smart Control you can program the remote to the TV.

MANUAL REMOTE CONTROL UPDATE PROCESS

1 Under Settings -> Device Preferences -> Smart Control you can update your remote control.

2 If your TV brand is automatically found, it will show in the window as shown to the right, simply check **Yes** to continue.

3 If your TV brand is not automatically found, you can type in the brand of the TV as shown.

4 Once you have validated the TV Power button works, choose **Yes** to continue.

5 Once you have validated the Source button works, choose **Yes** to continue.